



SCHWINN®

EST. 1895

FLOOR PUMP

MULTI-PURPOSE PUMP

MORE THAN JUST BIKES

Also includes inflation cone and sport ball needle

ACCURATE INFLATION

Large gauge ensures correct pressure

EASY TO USE

Comfortable handle and stable base



FEATURES

5 IN 1 FLOOR PUMP

Schrader valve, Presta valve, dial gauge, ball needle and inflation cone

LARGE GAUGE

Easy to see gauge allows you to inflate up to 160 psi

COMFORT AND MAXIMUM EXTENSION

Ergonomic handle and swivel hose for comfort and maximum extension

WIDE BASE

Provides extra stability while using



SEE INSTRUCTIONS INSIDE



FOR THE SAKE OF OUR PLANET:
PLEASE REDUCE, REUSE, RECYCLE, REPEAT.

PACIFIC CYCLE 

4902 HAMMERSLEY ROAD / MADISON, WI 53711 USA
1-800-515-0074 / CUSTOMERSERVICE@PACIFIC-CYCLE.COM
© 2012 PACIFIC CYCLE, INC. MADE IN CHINA

WWW.SCHWINNBIKES.COM

FOLLOW RIDE SCHWINN ON:  

INCLUDES:

One floor pump, Schrader valve, Presta valve, ball needle and inflation cone

⚠ WARNING:

- Never force pump head on valve
- Always check tires for proper pressure requirements
- Never overinflate
- This product may contain a chemical known to the State of California to cause cancer, birth defects, or other reproductive harm.

ITEM#: SW76506-2




Model: SW76506-2
Date: 712A0405AG
City/Province/Country:
Kunshan city, Jiangsu, China

PA12_PK_0920-4AL

INSTRUCTIONS:

FOR SCHRADER VALVES:
PUMP IS PRESET FOR USE
WITH SCHRADER VALVE.

1. See illustration 1-3.
2. Push lever down.
3. Press large hole in head on to valve.
4. Lift lever up to lock.
5. Inflate tire to desired pressure. The recommended psi tire pressure is listed on the side wall of the tire.
6. Push lever down to unlock and remove head from valve.

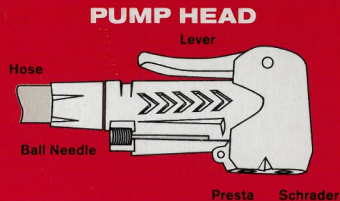

FOR PRESTA (FRENCH) VALVES:

1. See illustration 4-6.
2. Open Presta valve cap on the valve. See illustration 5.
3. Push small hole in head on to Presta valve, lift lever and inflate tire. See illustration 6.
4. Push lever down to remove head from Presta valve.
5. Tighten Presta valve cap on the bicycle tube.

INFLATION CONE USE:

1. See illustration 7 & 8.
2. With lever down push inflation cone into the large hole in head.
3. Raise lever to lock.
4. Open valve on inflatable air mattress or beach ball.
5. Push inflation cone into valve hole.
6. Inflate to desired firmness. Over inflate slightly as some air will leak during valve closure.
7. Remove the inflation cone from the object and quickly close valve.
8. Return the inflation cone to the pump head for storage.

SPORTS BALL NEEDLE USE:


1. See illustration 9 & 10.
2. Moisten needle, push it into ball and inflate to desired hardness.
3. Remove needle quickly.
4. Broken needles can be replaced easily.

PUMP HEAD

SCHRADER VALVE



PRESTA VALVE

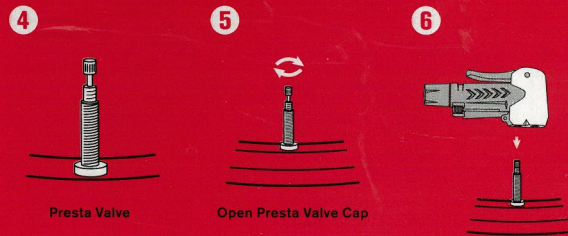

INFLATION CONE

SPORTS BALL NEEDLE

